


8. Place reflector

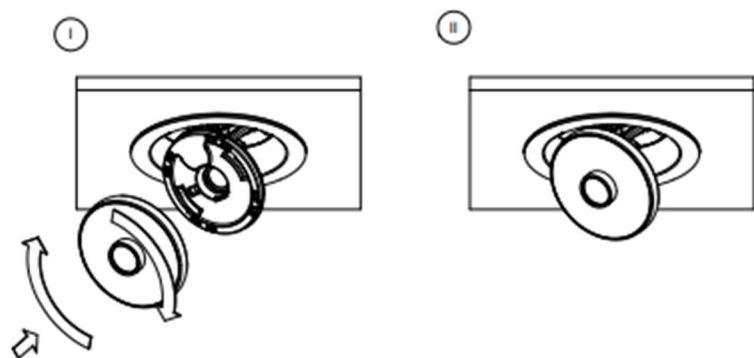


RobLight

RobLight A/S, Nordhavnsvej 1A, DK-9900 Frederikshavn
T: +45 9244 4888, E: info@rob-light.com
www.rob-light.com

RobLight accepts no responsibility for possible errors in catalogues, brochures and other printed material.
RobLight reserves the right to alter or discontinue its products without notice. © 2019 RobLight A/S

99082071, 14-06-2021, Rev. 1.1

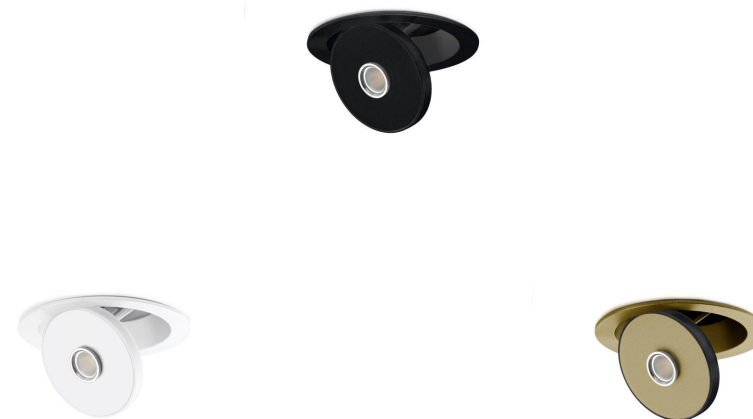


Corvus 1r


User manual

Install


1. Drill

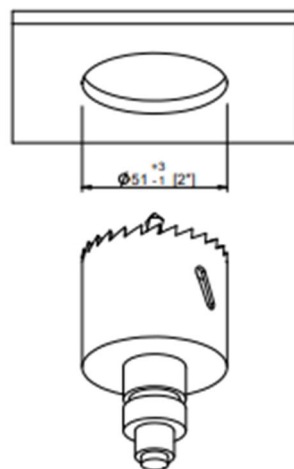


2. Install

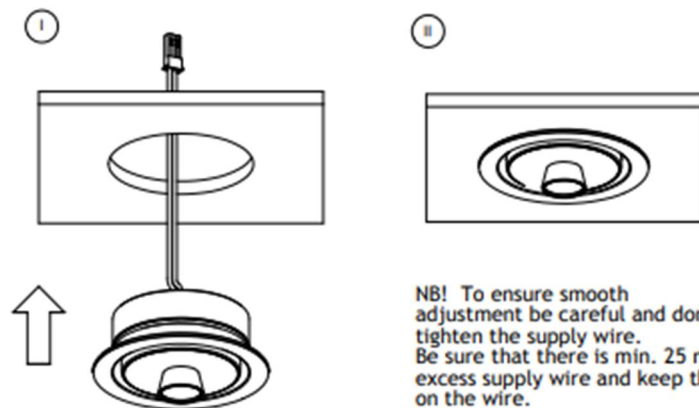

6. Remove PCB

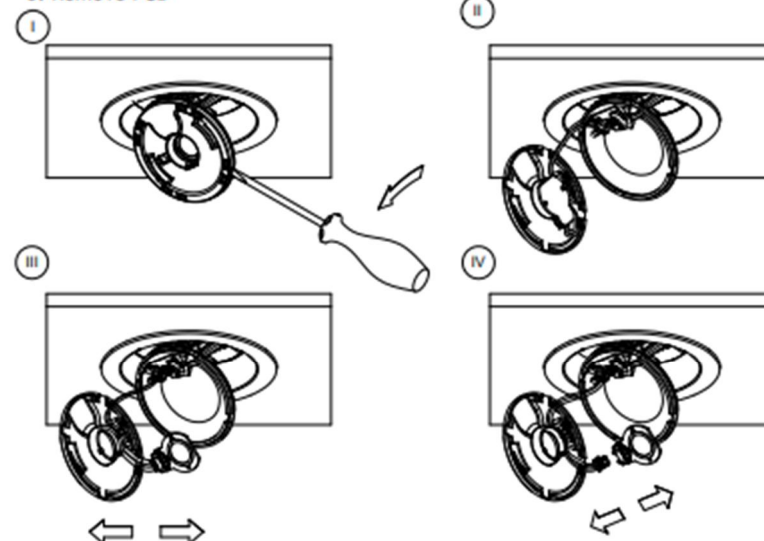

7. Place PCB

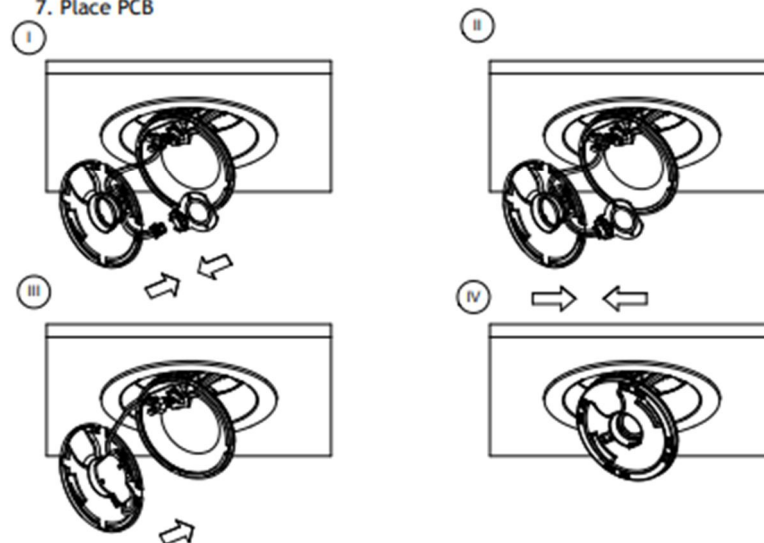

RobLight

5. Change reflector

I




II



RobLight


2a. Connect driver with fixed wires

Driver connection is indicative.
Please follow national rules
for connecting a Class II luminaire.

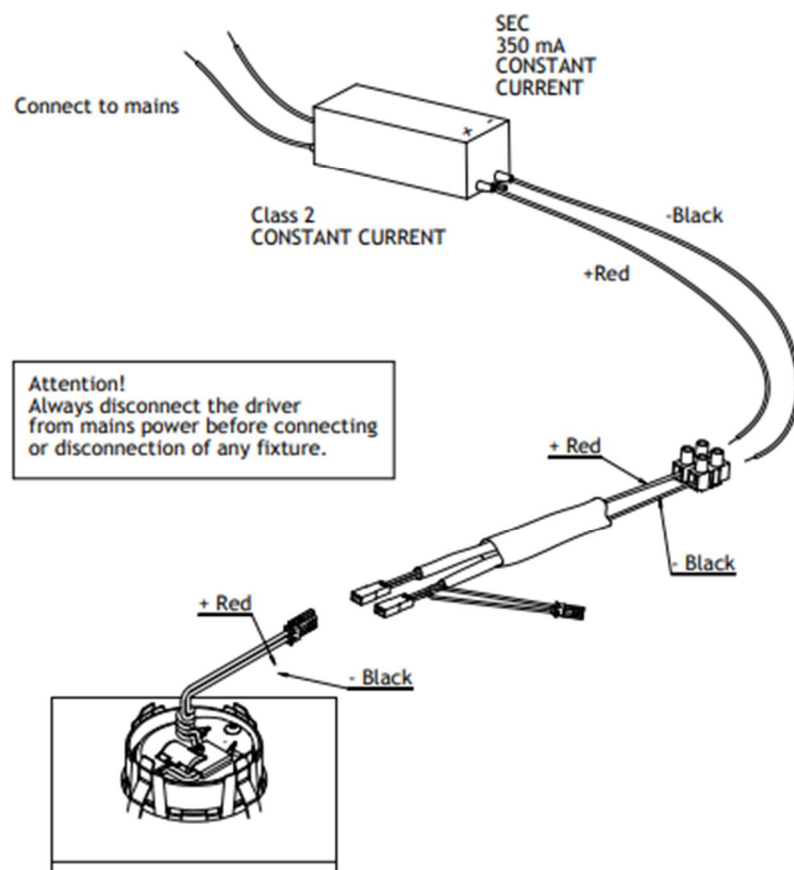

RobLight

2b. Connect driver with screw terminals

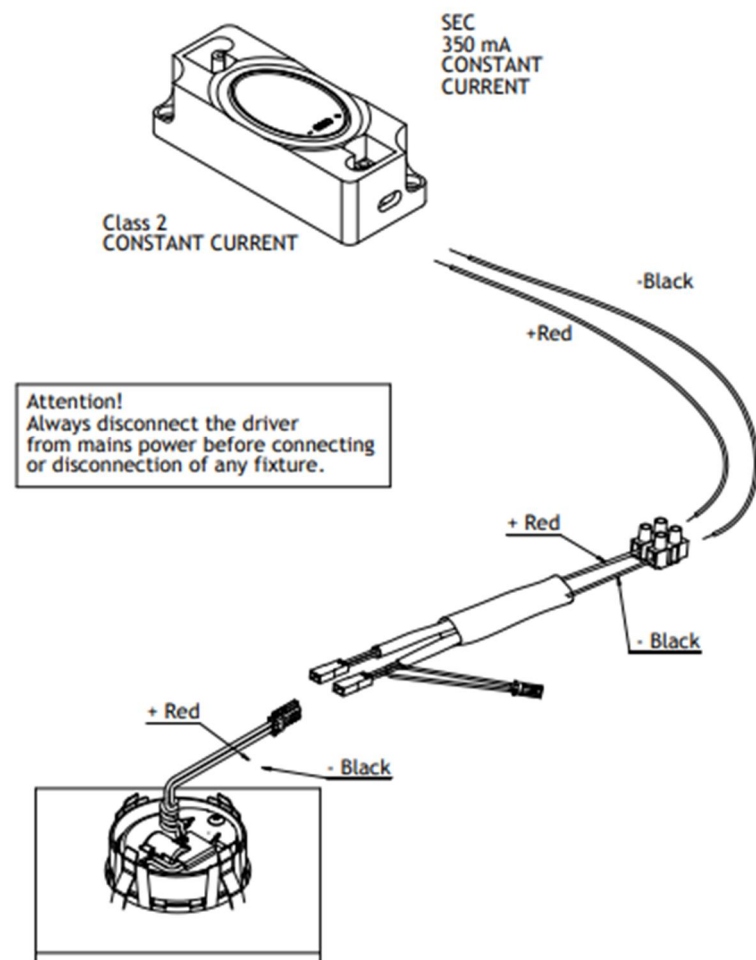

RobLight

4. Adjust angle

