



# RobLight

RobLight A/S, Nordhavnsvej 1A, DK-9900 Frederikshavn  
T: +45 9244 4888, E: info@rob-light.com  
www.rob-light.com

---


**Corvus 3r**

---

**User manual**


## Install

### 1. Drill

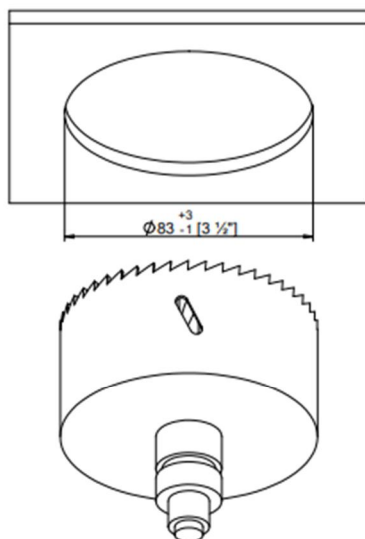


### 2. Install

I


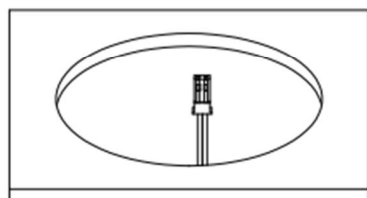


II

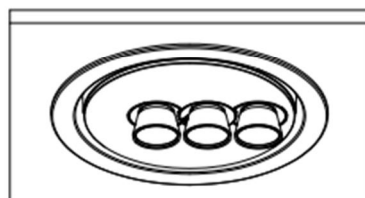

NB! To ensure smooth adjustment be careful and don't tighten the supply wire. Be sure that there is min. 25 mm excess supply wire and keep the twist on the wire.


### 9. Insert reflector

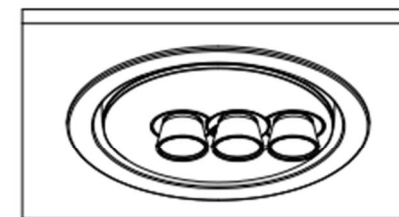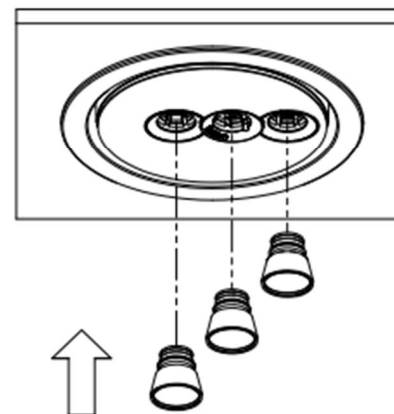


# RobLight

## 8. Place reflector fixture


I

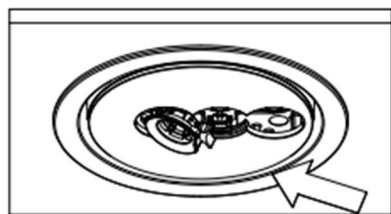


II

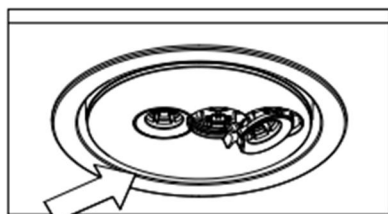

III

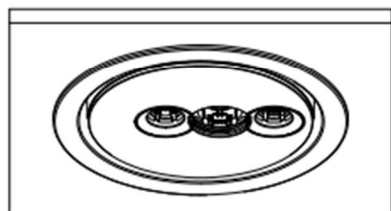


IV

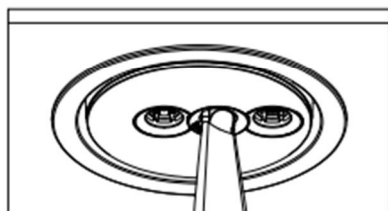

# RobLight

## 3a. Connect driver with fixed wires.


Driver connection is indicative.  
Please follow national rules  
for connecting Class II Luminaire.

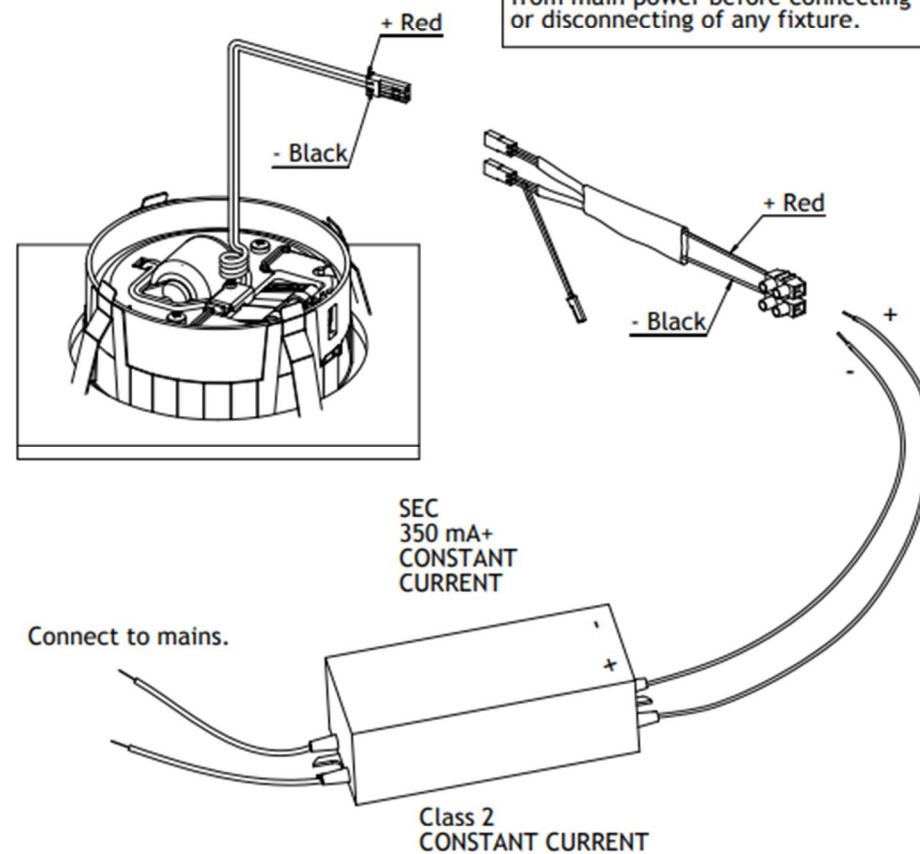

# RobLight

## 3b. Connect driver with screw terminal.


Driver connection is indicative.  
Please follow national rules  
for connecting Class II Luminaire.

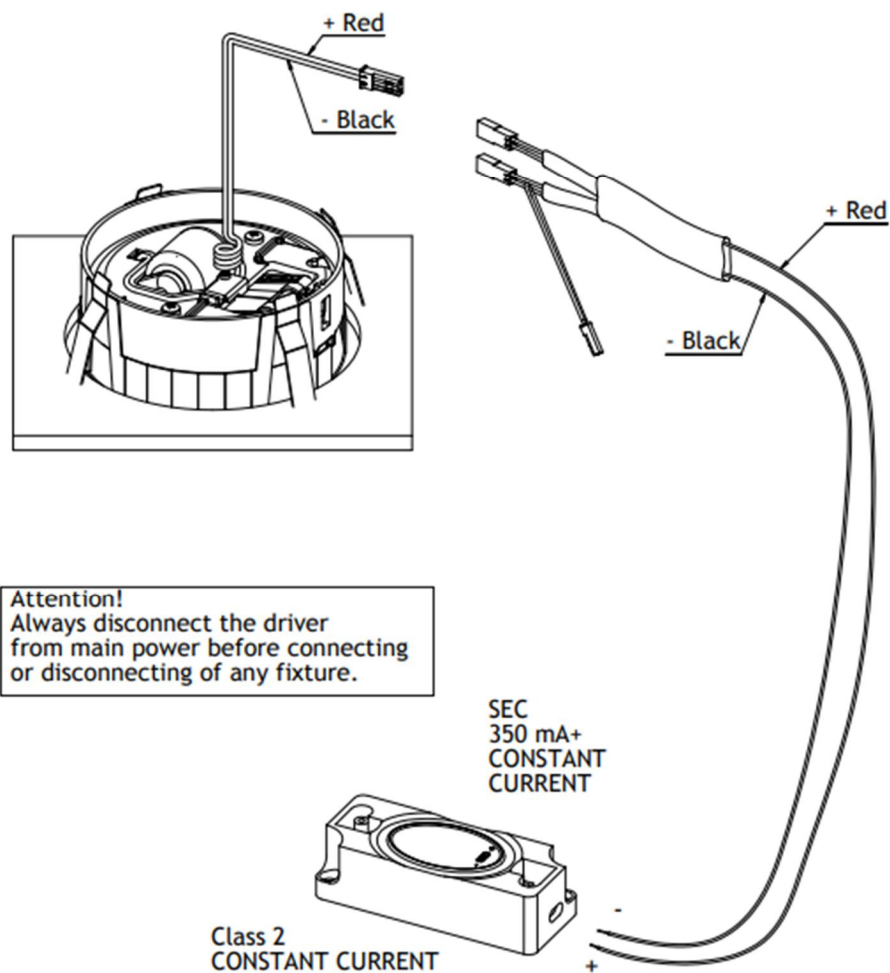


# RobLight

## 7. Replace PCB


①

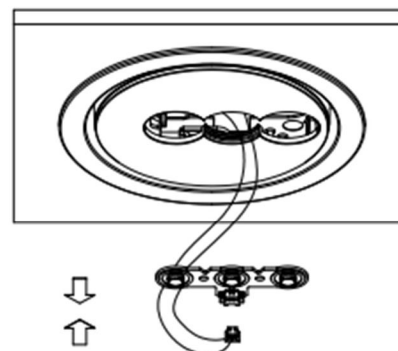


②

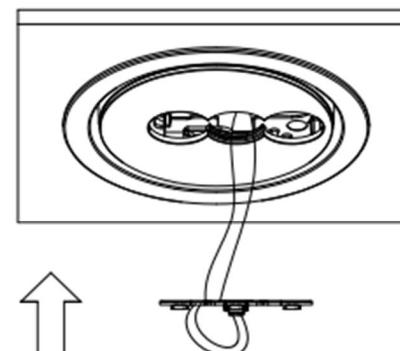

③

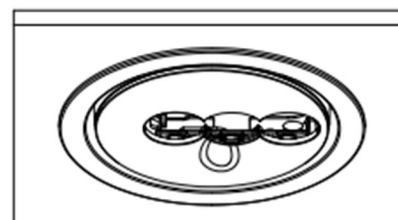


④

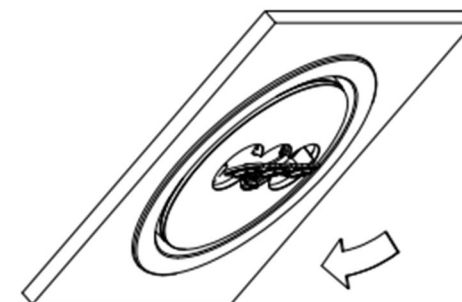


# RobLight

## 6. Remove PCB

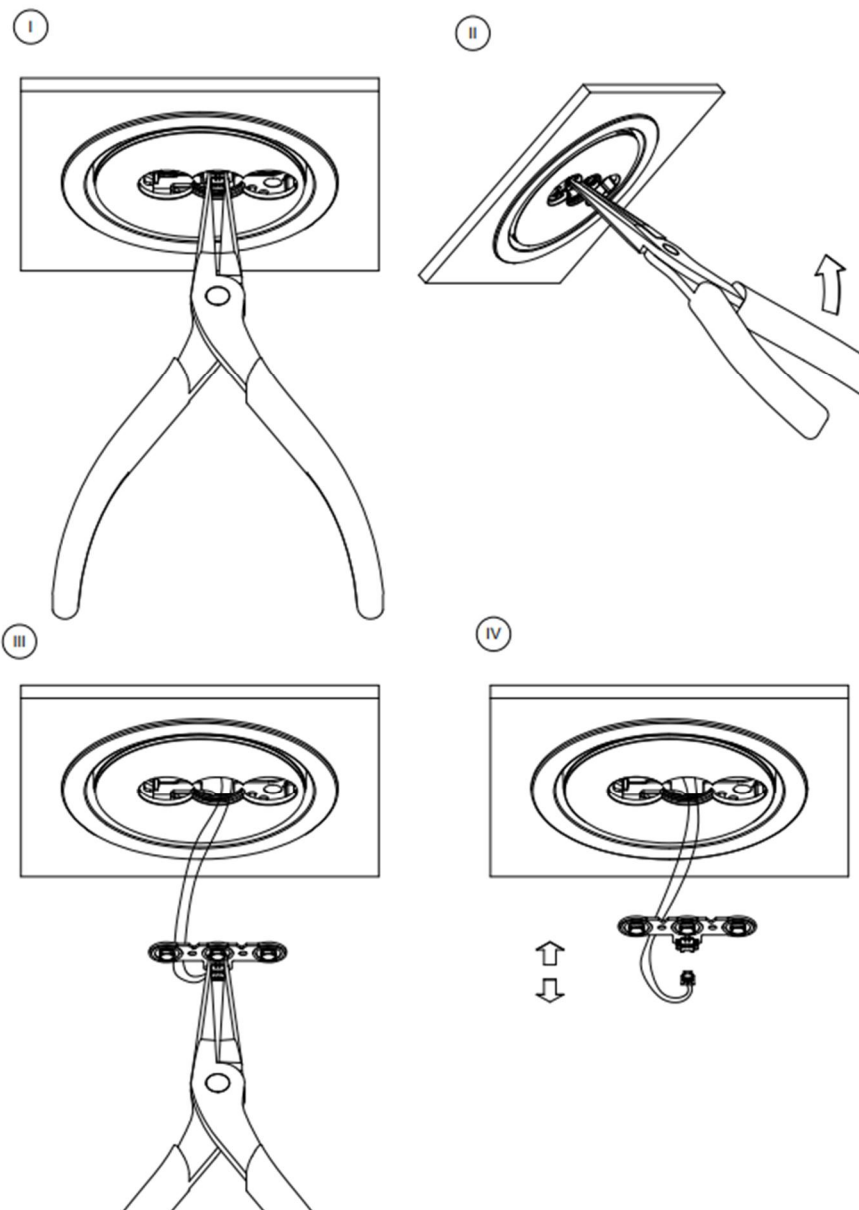


# RobLight

## 4. Change reflector or PCB Remove reflector.

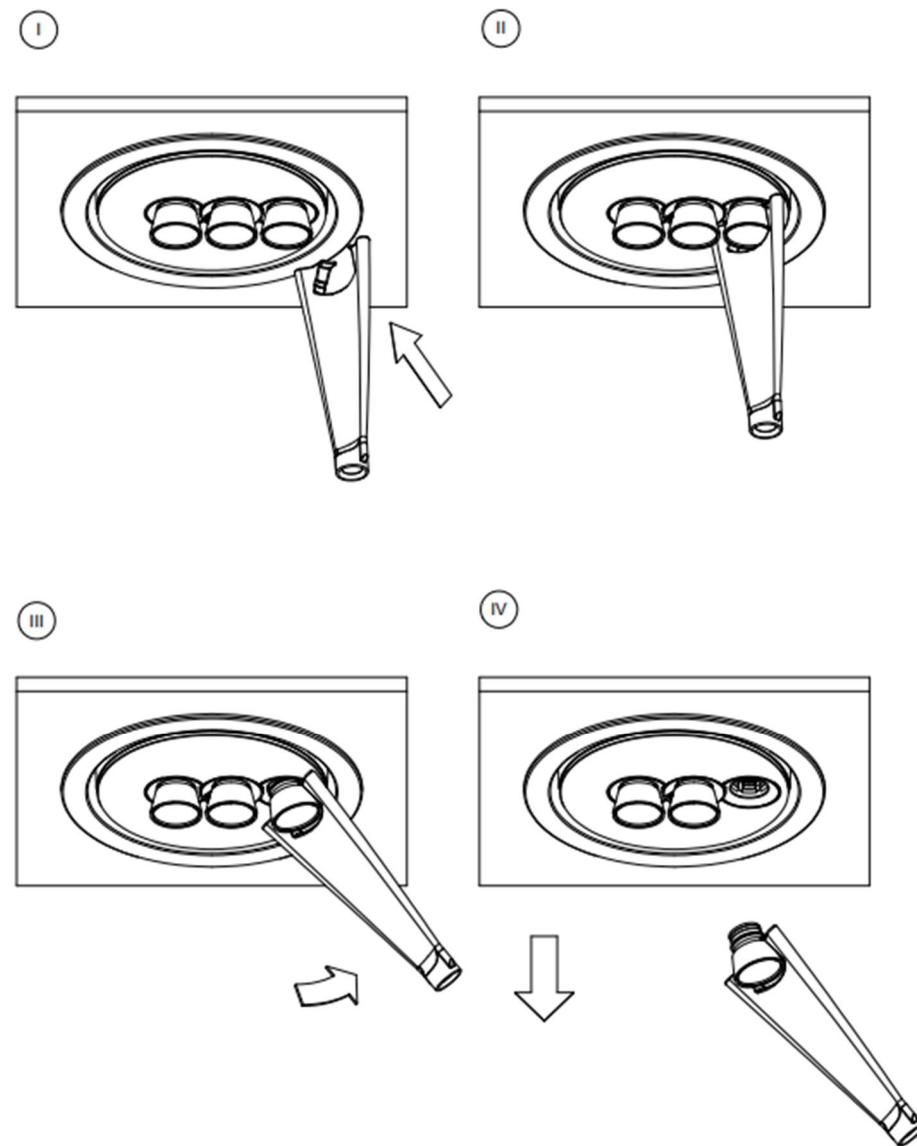


# RobLight

V

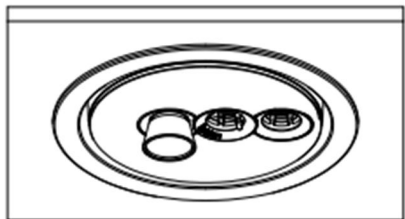



VI

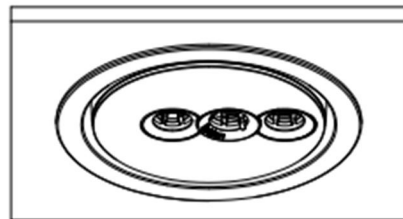

5. Remove reflector fixture.


I Turn off main power.

II

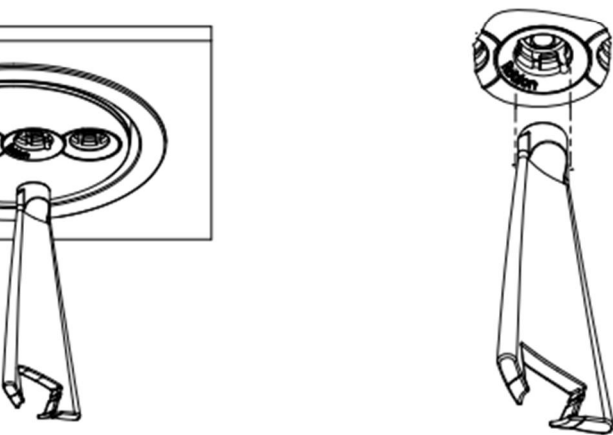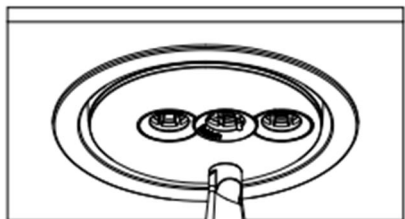


# RobLight


III

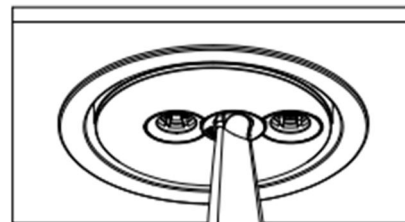

IV

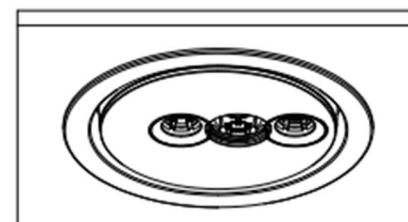

V

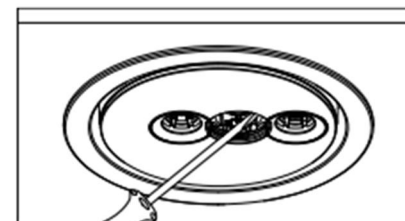

VI

