




## How to connect driver to FL 1000 light generators

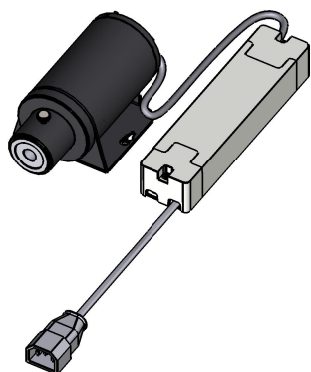


1. Unplug from the mains

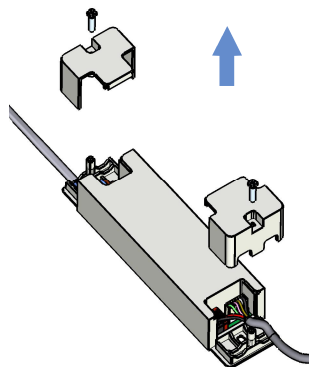


2. Loosen the screws and remove both shields from the driver.

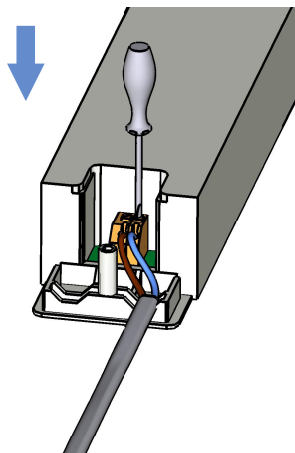


3. To release each wire press the top of the corresponding terminal with a screwdriver

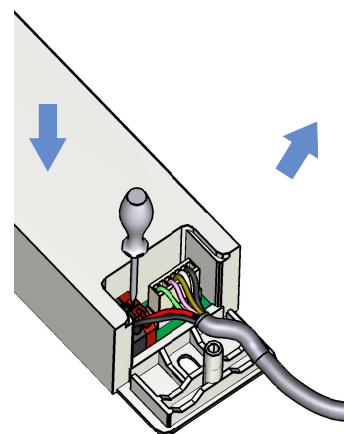


4. To release each wire press the top of the corresponding terminal with a screwdriver. To remove the connector, squeeze the clip on the side and pull

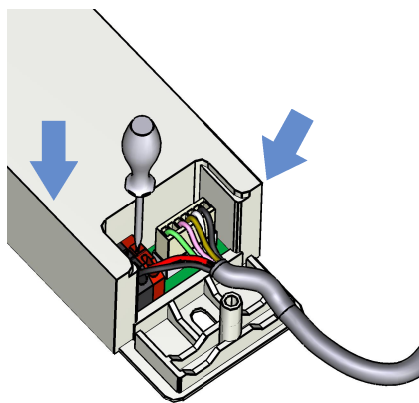

5. To install the new driver, insert the red wire in the + terminal and the blue wire in the - terminal. Before inserting, press the top of the corresponding terminal with a screwdriver. When released, the wire is secured in place. Put the connector back in

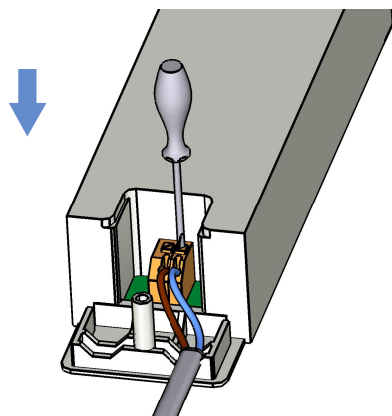

6. Now insert the blue wire in the (L) terminal and the brown wire in the (N) terminal at the other end. Before inserting, press the top of the corresponding terminal with a screwdriver. When released, the wire is secured in place

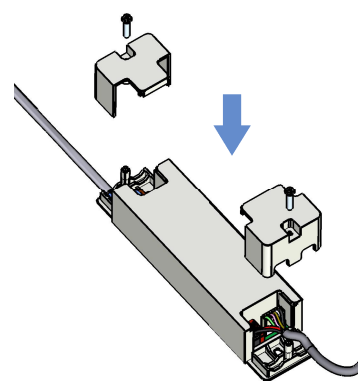

7. Reattach the shields and screw them in place