



If problems are not solved using this guide, please contact RobLight A/S.

RobLight

RobLight A/S, Nordhavnsvej 1A, DK-9900 Frederikshavn
T: +45 9244 4888, E: info@rob-light.com
www.rob-light.com


Mounting of filters

Mounting and installation of
filters for FL 1500 C DMX, F, XT


Mounting instruction

Applies to:

	Item nr.
CTC Filter -1000K Ø28	0126 1019
CTC Filter -1200K Ø28	0126 1020
CTC Filter -900K Ø28	0126 2021
CTC Filter +2000K Ø28	0126 2022
CTC Filter +1000K Ø28	0126 2023

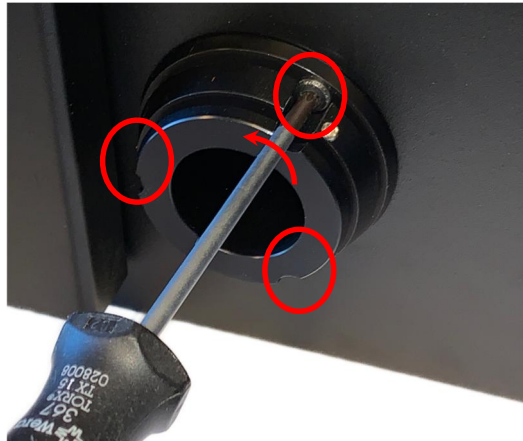


1. Unscrew the front part from the light generator. Do the work in a dry clean environment.

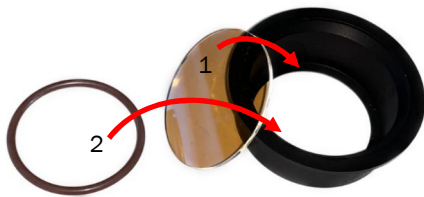

2. Assemble the filter and bracket. Dont touch the dichroic glass surfaces.



3. Mount the assembled filter in the detached front part.

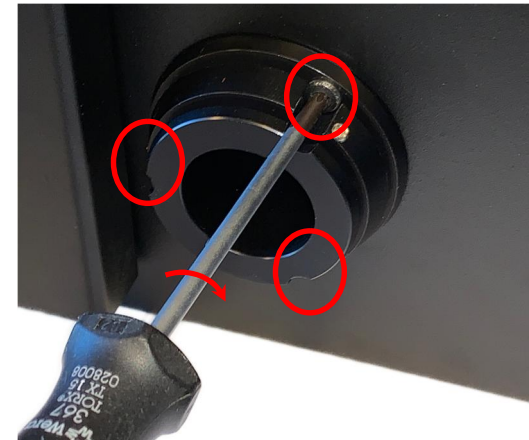

4. Screw the front part on to the light generator.